

DO

ACCUVAC DISSOLVED OXYGEN, LOW RANGE

0-1000 µg/L

Cat. No. 25010-50

To ensure accurate results, read carefully
before proceeding

WARNING: Reagents in this test kit may be harmful if misused. Please read the warnings on all chemical containers and use appropriate safety equipment.




MEASURING HINTS

■ The AccuVac ampul must be broken far enough below the surface of the sample to prevent air from being drawn into the ampul.


■ Use care in handling reacted ampuls since the broken tip is sharp. Do not cover ampul tip with fingers to invert.




1. Collect 40 mL of sample in beaker. Pour 10 mL into the zeroing vial.

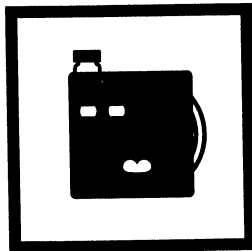

2. Place this vial in the left top opening of the AccuVac color comparator.

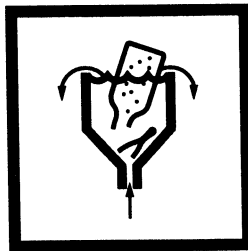


3. Obtain a sample directly from the sample stream by pushing down on the ampul to break and fill the ampul. Use the AccuVac Snapper for convenience.

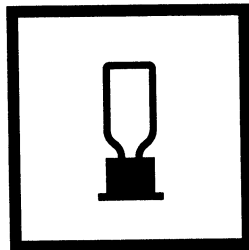


4. Without inverting the ampul, immediately place the ampul cap that has been filled with sample securely over the tip of the ampul.


Note: The cap prevents contamination with atmospheric oxygen.

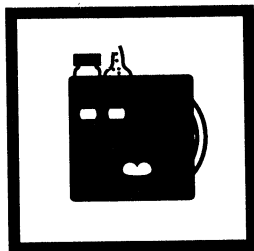

5. Place the ampul in the right top opening of the color comparator.

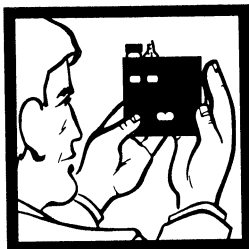

6. Hold the comparator up to a light source (sky, window or light). Look through the openings in the front.

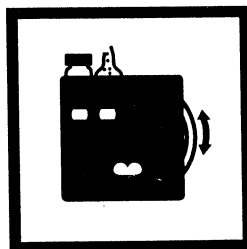

7. Rotate the color disc until the color matches in the two openings.



8. Read the $\mu\text{g/L}$ dissolved oxygen through the scale window.

REPLACEMENTS

Cat. No.	Description	Unit
24052-00	AccuVac Snapper	each
1080-42	Beaker, 100 mL, poly	each
1732-50	Color Comparator, AccuVac	each
25975-00	Color Disc, AccuVac, DO, LR	each
25010-25	Dissolved Oxygen AccuVac, Low Range	25/pkg
21228-00	Sample Cell, 10 mL	each



HACH COMPANY

P.O. Box 389

Loveland, Colorado 80539

Telephone: 800-227-4224 (in U.S.A.)

(303) 669-3050 (outside U.S.A.)

FAX: (303) 669-2932

Telex: 160840