

easy Line for pH, ORP, Dissolved Oxygen and Conductivity

Easy and versatile

Technical Data



Short description

The M200 easy line provides digital sensor technology and covers pH, ORP, Dissolved Oxygen and Conductivity measurements. The ease of use and comfortable operation is performed thanks to the large display, plain text interface, quick access menu, easily accessible wiring terminals and quick setup guide. With the digital sensor technology provided by the easy Line, installation and commissioning, configuration as well as maintenance becomes substantially easier.

Features


- Input for digital sensor signals
- Plug and Play functionality
- Multi-parameter unit
- 4-wire installation
- Four (two for single channel) 0/4 ... 20 mA current outputs, galvanically isolated
- 2 configurable relays
- IP65 rated
- Quick setup mode
- 8 languages: English, German, French, Italian, Spanish, Portuguese, Russian and Japanese

Contents

M200 easy Line transmitters		easyFit Series housings	14
Assembly, Dimensional drawings	2	Short description	14
Specifications	4	Drawings	14
Connector pin definitions	6	Specifications, Ordering information	15
Ordering information	7	easyFlow Series housings	16
easySense Conductivity sensors	8	Short description	16
Short description, Specifications	8	Drawings	16
Drawings, Ordering information	9	Specifications, Ordering information	17
easySense pH and ORP electrodes	10	easyDip Series housings	18
Short description, Specifications	10	Short description, Specifications	18
Drawings, Ordering information	11	Drawings	18
easySense O₂ sensors	12	Ordering information	19
Short description, Specifications	12	Accessories	19
Drawing, Ordering information	13	Cables	19
Spare parts	13		





METTLER TOLEDO

1/2 DIN version – Assembly

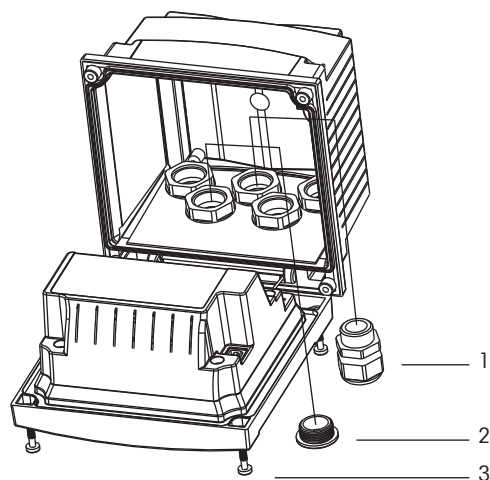


- 1 3 Pg 13.5 cable glands
- 2 2 plastic plugs
- 3 4 screws


1/2 DIN version – Dimensional drawings

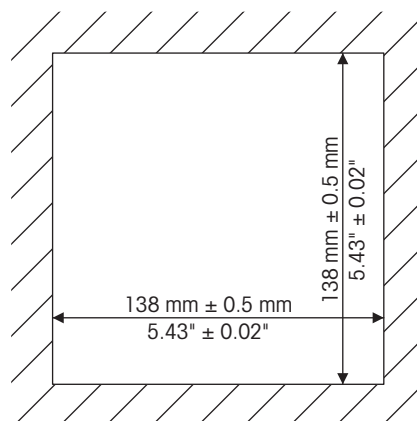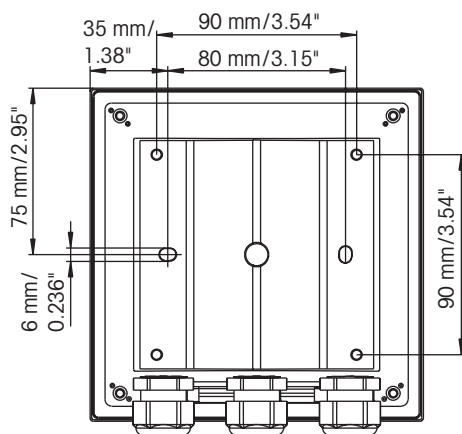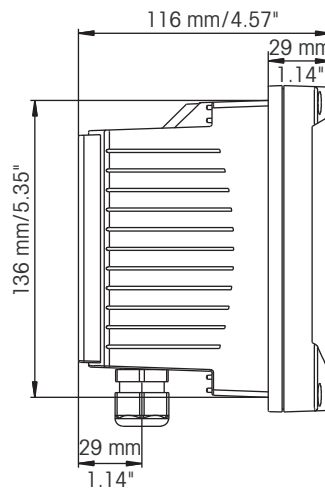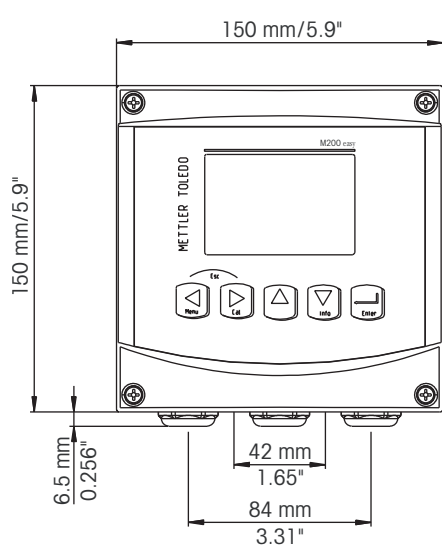

1/2 DIN version – Pipe mounting

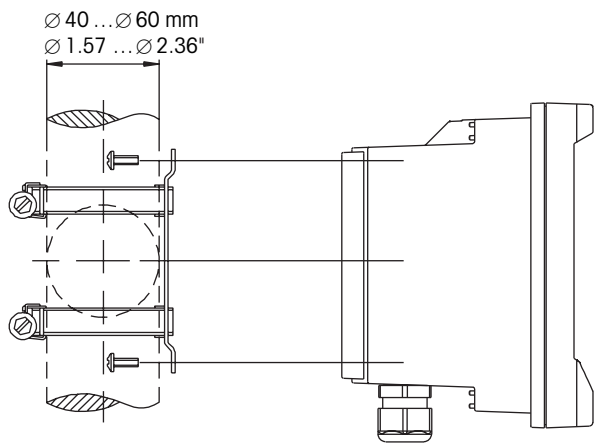

1/4 DIN version – Dimensional drawings

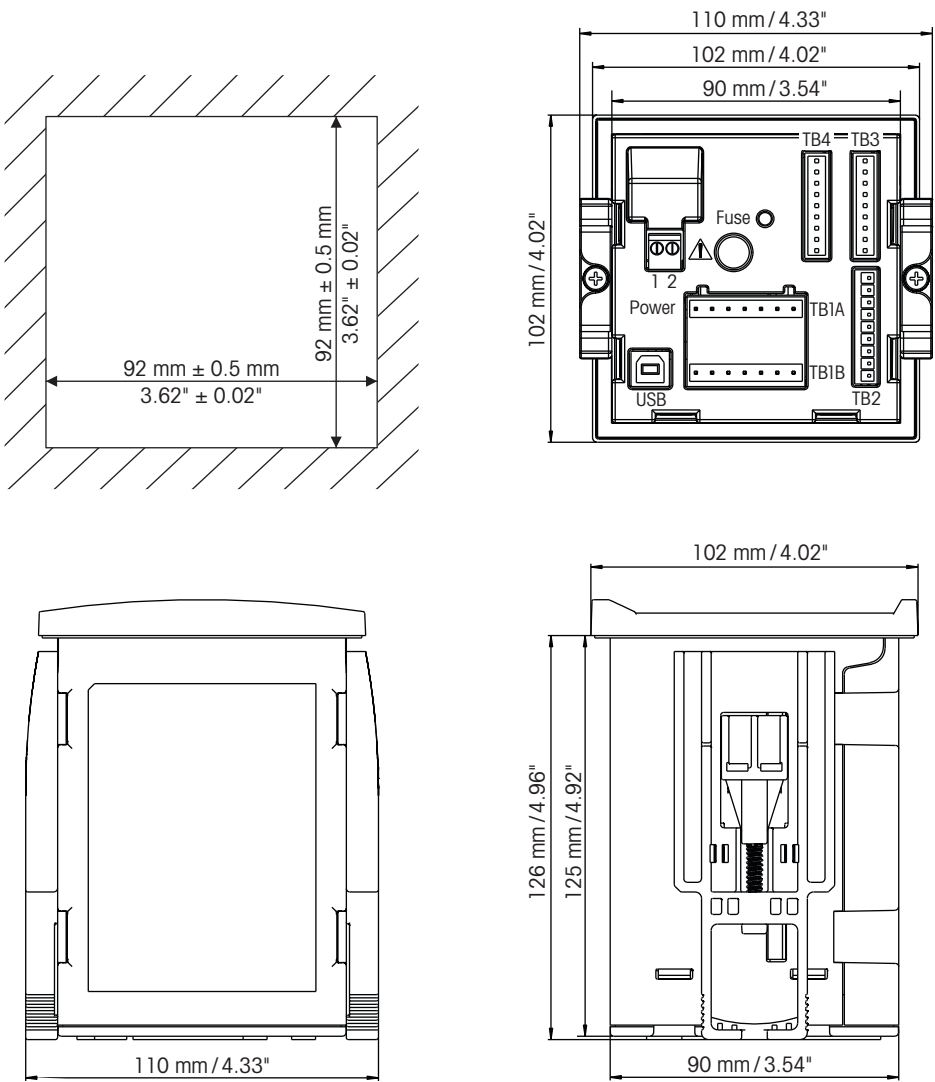

Specifications

M200 easy Line

pH

pH range	–1.00 to 15.00 pH
pH resolution	Auto/0.01/0.1/1 (can be selected)
pH accuracy	± 1 digit
Temperature measuring range	–30 to 130 °C (–22 to 266 °F)
Temperature resolution	Auto/0.001/0.01/0.1/1 °C/°F (can be selected)
Temperature accuracy	± 1 digit
Calibration	1-point (offset), 2-point, process
Sensor maximum distance	80 m (260 ft)

Dissolved oxygen

DO concentration range	0.00 to 50.00 ppm (mg/l)
DO saturation range	0 to 500 %
DO resolution	Auto/0.001/0.01/0.1/1 (can be selected)
DO accuracy	± 1 digit
Temperature measuring range	–10 to +80 °C (14 to 176 °F)
Temperature resolution	Auto/0.001/0.01/0.1/1 °C/°F (can be selected)
Temperature accuracy	± 1 digit
Calibration	1-point (slope or offset), process (slope or offset)
Sensor maximum distance	80 m (260 ft)

Conductivity

Cond range 2-electrode sensor	0.00 to 40000 µS/cm (25 Ω × cm to 20 MΩ × cm)
Cond range 4-electrode sensor	0.01 to 650 mS/cm (1.54 Ω × cm to 0.1 MΩ × cm)
Cond/Res resolution	Auto/0.001/0.01/0.1/1 (can be selected)
Cond/Res accuracy	± 1 digit
Temperature measuring range	–40 to 200 °C (–40 to 392 °F)
Temperature resolution	Auto/0.001/0.01/0.1/1 °C/°F (can be selected)
Temperature accuracy	± 1 digit
Chemical concentration curves	HCl (0–15 %), H ₂ SO ₄ (0–25 %), NaOH (0–15 %), H ₃ PO ₄ (0–35 %), HNO ₃ (0–25 %)
TDS range (CaCO ₃ and NaCl)	Covers equivalent conductivity ranges
Calibration	1-point (slope), 2-point, process
Sensor maximum distance	80 m (260 ft)

ORP

ORP range	–1500 to 1500 mV
ORP resolution	Auto/0.001/0.01/0.1/1 (can be selected)
ORP accuracy	± 1 digit
Calibration	1-point (offset)
Sensor maximum distance	80 m (260 ft)

Specifications

M200 easy Line

Electrical specifications for 1/2 and 1/4 DIN versions

Power supply	100 to 240 V AC or 20 to 30 V DC, 10 VA
Frequency for AC	50 to 60 Hz
Number of outputs (analog)	4 (2 for single channel)
Current output	0/4 to 20 mA, 22 mA alarm, galvanically isolated from input and from earth/ground
Measurement error through analog outputs	< ±0.05 mA over 1 to 20 mA range < ±0.10 mA over 0 to 1 mA range
Analog output configuration	Linear
Load	max. 500 Ω
Digital communication	USB port, Type B connector
Display	Backlit LCD, 4 lines
Keypad	5 tactile feedback keys
Password protection	Yes
Languages	8 (English, German, French, Italian, Spanish, Portuguese, Russian and Japanese)
Hold input	Yes
Alarm contact	Yes (alarm delay 0 to 999 s)
Connection terminal	Detachable screw terminals
Relays	2-SPDT mechanical rated at 250 VAC, 3 Amps resistive
Digital input	2 (1 for single channel)
Alarm relay delay	0 – 999 s
Mains fuse	1.0 A slow Blow type FC
Max. cable length to sensor	80 m (260 ft)
Approvals	CE compliant

Environmental specifications for 1/2 and 1/4 DIN versions

Storage temperature	–40 to 70 °C (–40 to 158 °F)
Ambient temperature operating range	–10 to 50 °C (14 to 122 °F)
Relative humidity	0 to 95%, non-condensing
Emissions	According to EN55011 Class A
UL electrical environment	Installation (overvoltage) category II

Mechanical specifications for 1/2 DIN version

Dimensions	Housing – (H × W × D) ¹	144 × 144 × 116 mm
	Front bezel – (H × W) ¹	150 × 150 mm
	Max. D – panel mounted	87 mm (excludes plug-in connectors)
Weight	0.95 kg (2 lb)	
Material	ABS/polycarbonate	
Ingress rating	IP 65	


¹ H = Height, W = Width, D = Depth

Mechanical specifications for 1/4 DIN version

Dimensions	Housing – (H×W×D) ¹	96×96×140 mm
	Front bezel – (H×W) ¹	102×102 mm
	Max. D – panel mounted	125 mm (excludes plug-in connectors)
Weight	0.60 kg (1.5 lb)	
Material	ABS/polycarbonate	
Ingress rating	IP 65 (front), IP 20 (housing)	
¹ H = Height, W = Width, D = Depth		

Connector pin definitions for 1/2 and 1/4 DIN versions


1/2 DIN housing (wall mount)

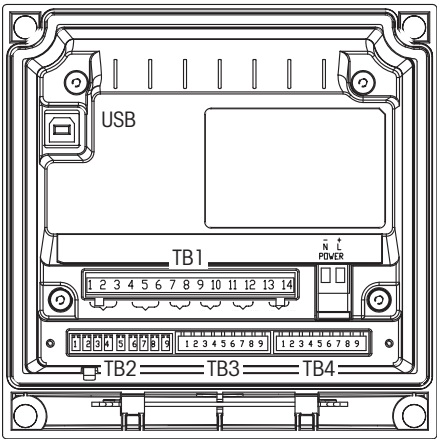

TB1

Pin	
1	NO1
2	COM1
3	NC1
4	NO2
5	COM2
6	NC2
7	–
8	–
9	–
10	–
11	–
12	–
13	–
14	–

1/4 DIN housing (panel mount)

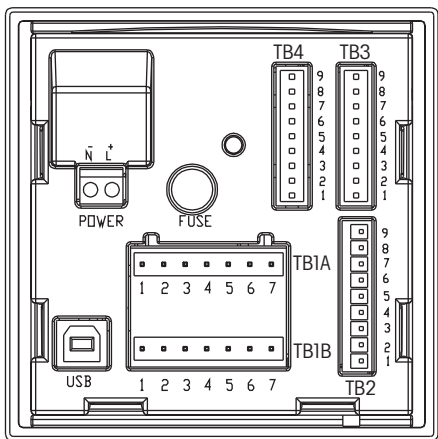

TB1 A

Pin	
1	NO2
2	COM2
3	NC2
4	–
5	–
6	–
7	–

TB1 B

Pin	
1	NO1
2	COM1
3	NC1
4	–
5	–
6	–
7	–

Connector pin definitions for 1/2 and 1/4 DIN versions (cont.)

1/2 DIN housing (wall mount) and 1/4 DIN housing (panel mount)

TB2

Pin	
1	AO1+
2	AO1–/AO2–
3	AO2+
4	AO3+ (dual channel only)
5	AO3–/AO4– (dual channel only)
6	AO4+ (dual channel only)
7	DI1+
8	DI1–/DI2– (dual channel only)
9	DI2+ (dual channel only)

TB3/TB4 pin definitions for 1/2 DIN and 1/4 DIN versions (TB4 for 2 channel versions only)

TB3/TB4¹

Pin	
1	24 V DC
2	GND (24 V DC)
3	1-wire
4	GND (5 V DC)
5	not used
6	GND (5 V DC)
7	RS 485–
8	RS 485+
9	5 V DC

¹ Dual channel only

Ordering information

Transmitter	Order nr
M200 easy, 1/4 DIN, single channel	52 121 554
M200 easy, 1/2 DIN, single channel	52 121 555
M200 easy, 1/4 DIN, dual channel	52 121 556
M200 easy, 1/2 DIN, dual channel	52 121 557

Accessories	Order nr
Pipe mount kit for 1/2 DIN versions	52 500 212
Panel mount kit for 1/2 DIN versions	52 500 213
Protective hood for 1/2 DIN versions	52 500 214
Adapter panel – M200 easy to 200/2000 cutout	58 083 300
Replacement power fuses 5 × 20 mm, 1A, 250V, time lag, Littlefuse or Hollyland	58 091 326
Terminal blocks for M200 easy, M300, M400	52 121 504

Short description



easySense
Cond 71 – 72



easySense
Cond 73



easySense
Cond 77

easySense Cond – 4-electrode/2-electrode sensors

2-electrode conductivity sensors are used for filtration, reverse osmosis and deionization applications for water make-up and pure water in a variety of industrial water applications.

- easySense Plug and Play technology with pre-calibrated sensors makes installation simple and easy
- Concentric 2-electrode temperature compensated sensors for consistent conductivity measurement
- In-line piping and submersion installations with rugged NPT connections
- Digital sensors with preassembled cable lengths of 7.6 m (25 ft) to 30.5 m (100 ft)

Specifications

	easySense Cond 71, 72, 73	easySense Cond 77
Measuring principle	2-electrode sensor	4-electrode sensor
Cell constant	0.1 cm ⁻¹	0.350 cm ⁻¹
Measuring range	0.1 ... 2000 µS/cm (500 Ω-cm to 10 MΩ-cm)	0.02 ... 400 mS/cm
System accuracy	± 3.0 % or better	± 5.0 % or better
Max. sensor length	29 mm (1.14")	40.7 mm (1.6")
Temperature compensation	Standard high purity, cation, ammonia, Light 84, isopropanol, glycol	Standard high purity, cation, ammonia, Light 84, isopropanol, glycol
Temperature range	0 ... 80 °C (32 ... 176 °F)	0 ... 80 °C (32 ... 176 °F)
Temperature accuracy at 25 °C (77 °F)	± 0.5 °C (± 0.9 °F)	± 0.5 °C (± 0.9 °F)
Cable	PVC sheath, tinned ends, max. 75 °C (167 °F)	see separate cable specifications

Design

Temperature compensation	30 kOhm NTC	30 kOhm NTC
Wetted parts:		
– Electrodes	Titanium	1.4435 SS (316L)
– Insulator	Noryl	CPVC


Working conditions

easySense model	Insertion fitting	Cable length	Body material	Electrodes, material	Max. pressure at temp.
Cond 71	3/4" NPT	7.6 m (25 ft)	PPO	2, titanium	13.8 bar/80 °C 200 psig/176 °F
Cond 71	3/4" NPT	30.5 m (100 ft)	PPO	2, titanium	13.8 bar/80 °C 200 psig/176 °F
Cond 72	1/2" NPT	7.6 m (25 ft)	PPO	2, titanium	13.8 bar/80 °C 200 psig/176 °F
Cond 72	1/2" NPT	30.5 m (100 ft)	PPO	2, titanium	13.8 bar/80 °C 200 psig/176 °F
Cond 73	3/4" NPT & subm	7.6 m (25 ft)	CPVC	2, titanium	13.8 bar/80 °C 200 psig/176 °F


Specifications (cont.)

easySense model	Insertion fitting	Cable length	Body material	Electrodes, material	Max pressure at temp
Cond 73	3/4" NPT & subm	30.5 m (100 ft)	CPVC	2, titanium	13.8 bar/80 °C 200 psig/176 °F
Cond 77	3/4" NPT	K8S connector	CPVC	4, SS 1.4435	13.8 bar/80 °C 200 psig/176 °F


Drawings

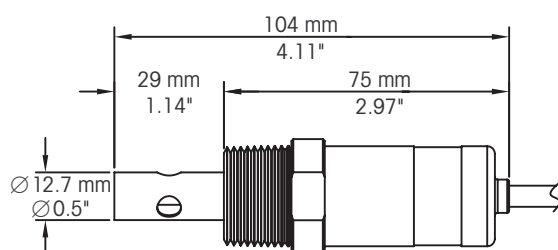

easySense Cond 71 – 72

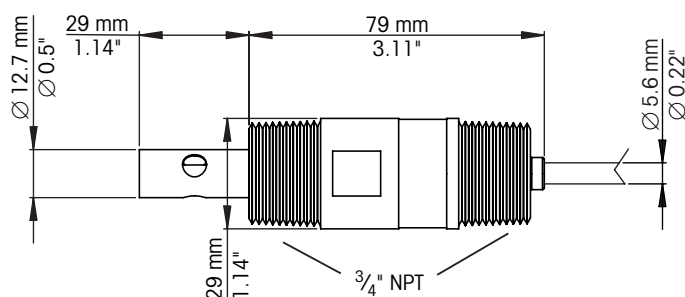

easySense Cond 73

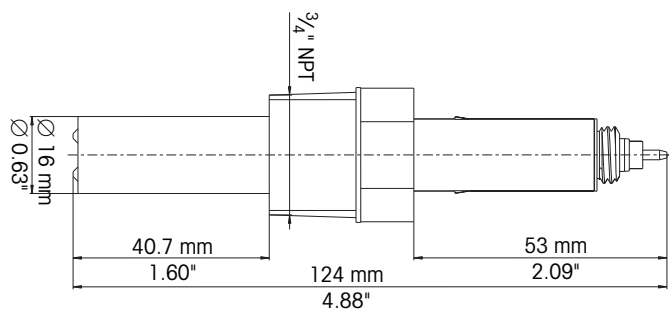

easySense Cond 77

Ordering information

easySense Cond	Cable length	Order nr
easySense Cond 71	7.6 m (25ft)	58 031 300
easySense Cond 71	30.5 m (100ft)	58 031 301
easySense Cond 72	7.6 m (25ft)	58 031 302
easySense Cond 72	30.5 m (100ft)	58 031 303
easySense Cond 73	7.6 m (25ft)	58 031 304
easySense Cond 73	30.5 m (100ft)	58 031 305
easySense Cond 77 ¹		52 003 810

¹ AK9 coax cable required, see ordering information on page 19

Short description



easySense
pH electrode

easySense
ORP electrode

pH and ORP electrodes for low maintenance


The METTLER TOLEDO easySense Line low-maintenance combination electrodes for the continuous measurement of pH/temperature or ORP have been designed primarily for use in the process industry and in the field of water treatment. A whole range of integral technical features ensures trouble-free, continuous and highly accurate pH/temperature or ORP measurement with a very short response time:

- Prepressurization of the gel electrolyte (easySense pH 32, 33 and 34) provides permanent internal pressure within the electrode, thereby preventing the ingress of process medium into the reference system and, at the same time, ensuring continuous cleaning of the diaphragm through the constant slow outflow of small amounts of electrolyte.
- The patented silver-ion barrier integrated in the reference system avoids contamination and clogging of the diaphragm with black silver sulfide during measurement in process media containing sulfur compounds.
- Designed for use in stirred tanks, vessels, open tanks and pipes in the chemical industry under harsh process conditions at up to 6 bar overpressure.

Specifications

Sensor type	easySense pH 31	easySense pH 32	easySense pH 33	easySense pH 34	easySense ORP 41
Measuring range	pH 0...14	pH 0...14	pH 0...14	pH 0...14	n.a.
Temperature	–5 ... 80 °C 23 ... 176 °F	–5 ... 80 °C 23 ... 176 °F	–5 ... 80 °C 23 ... 176 °F	–5 ... 80 °C 23 ... 176 °F	–5 ... 80 °C 23 ... 176 °F
Pressure resistance	0 ... 2 bar 0 ... 29 psig	0 ... 2 bar 0 ... 29 psig	0 ... 2 bar 0 ... 29 psig	0 ... 2 bar 0 ... 29 psig	0 ... 2 bar 0 ... 29 psig
Pressure resistance (0 ... 40 °C/32 ... 104 °F)	0 ... 6 bar 0 ... 87 psig				0 ... 6 bar 0 ... 87 psig
Reference system	Argenthal (Ag/AgCl)	Argenthal (Ag/AgCl)	Argenthal (Ag/AgCl)	Argenthal (Ag/AgCl)	Argenthal (Ag/AgCl)
Reference electrolyte	gel	pressurized gel	pressurized gel	pressurized gel	polymer
Diaphragm	1 ceramic	1 ceramic	1 ceramic	1 ceramic	open junction
Glass shaft	Ø 12 mm	Ø 12 mm	Ø 12 mm	Ø 12 mm	Ø 12 mm
Plug head	K8S, Pg 13.5 thread	K8S, Pg 13.5 thread	K8S, Pg 13.5 thread	K8S, Pg 13.5 thread	K8S, Pg 13.5 thread
Membrane glass	HA	HA	HF	LoT	Platinum ring
Application	general purpose	harsh processes	HF resistant	low temperature	general purpose

Drawings

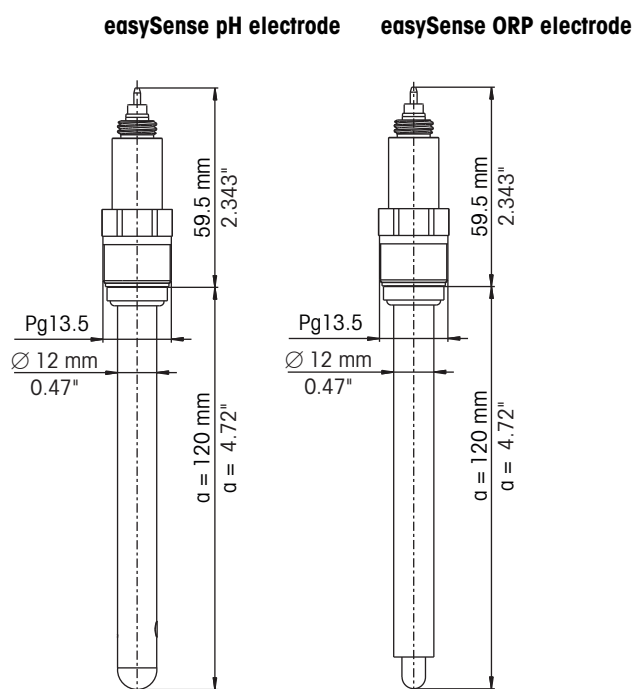

Ordering information

Electrodes

pH electrodes

	Order nr
easySense pH 31 ¹	52 003 771
easySense pH 32 ¹	52 003 768
easySense pH 33 ¹	52 003 770
easySense pH 34 ¹	52 003 769

¹ AK9 coax cable required, see ordering information on page 19

Redox electrodes

easySense ORP 41 ¹	52 003 772
-------------------------------	------------

¹ AK9 coax cable required, see ordering information on page 19

Buffer solutions

	Order nr 1 × 250 ml	Order nr 6 × 250 ml	Order nr 1 × 1000 ml
Buffer pH=4.01 (red)	51 340 057	51 340 058	51 340 228
Buffer pH=7.00 (green)	51 340 059	51 340 060	51 340 229
Buffer pH=9.21 (blue)	51 300 193	51 300 194	51 340 230
Buffer pH=10.00 (colorless)	52 118 096	51 319 062	51 340 232
Redox buffer +220 mV (yellow)	51 340 065	51 340 081	51 319 021

Short description


easySense O₂ 21

The METTLER TOLEDO oxygen sensor is built upon the proven platform of process analytical sensors. The easySense line combines high measurement stability with easy handling and maintenance. The digital communication and Plug and Play functionality allow for sensor replacement without complicated configuration. Calibration can be performed in the lab and the data are stored in the sensor head.

Specifications

	easySense O ₂ 21 sensor
Measurement principle	amperometric/polarographic (in accordance with the requirements of ISO5814 and EN25814)
Working conditions	
Operating range	0.03 ppm – 100 % saturation
Permissible pressure range during measuring (absolute)	0.5 ... 2 bar (7.2 ... 29 psi)
Mech. pressure resistance (absolute)	max. 2 bar (max. 29 psi)
Permissible temperature range during measuring	0 ... 60 °C (32...140 °F)
Mechanical	0 ... 60 °C (32...140 °F)
Temperature resistance	–
Sensor performance	
Accuracy in aqueous media	≤±[1 % + 0.03 ppm]
Response time at 25 °C (77 °F) (air ? N ₂)	t _{98%} < 90 s
Sensor signal in ambient air at 25 °C (77 °F)	40 ... 110 nA
Residual signal in N ₂ at 25 °C (77 °F)	–
% of signal in ambient air	0.3 %

Drawing

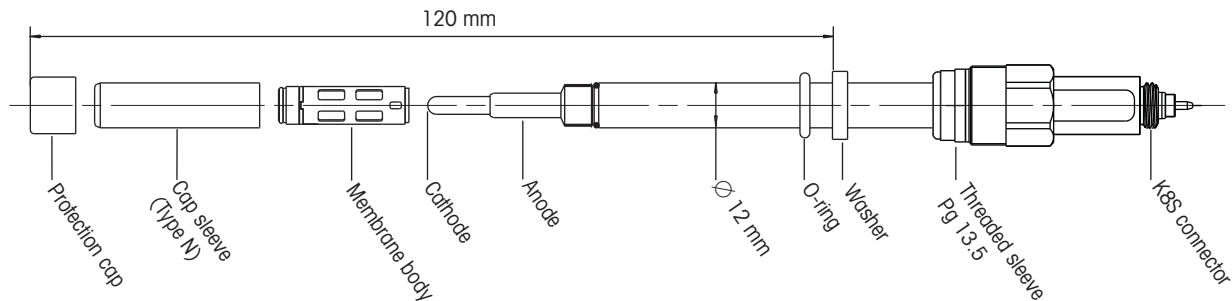

Ordering information

Electrode easySense O₂ 21

easySense O₂ 21¹

Order nr

52 206 406

¹ AK9 coax cable required, see ordering information on page 19

Spare parts



Spare parts

Membrane body T-96 (singly)	52 200 071
Membrane-kit T-96 (4 membrane bodies, 1 O-ring set, 25 ml electrolyte)	52 200 024
Membrane body S-96 (singly)	52 200 072
Membrane-kit S-96 (4 membrane bodies, 1 O-ring set, 25 ml electrolyte)	52 200 025
Electrolyte (25 ml)	34 1002 016

Membrane body

The T-type membrane bodies are Teflon-coated, and therefore optimally protected against aggressive media. On the other hand, the S-type membrane bodies use a silicone surface, which is thinner than a Teflon layer. This reduces the response time $t_{98\%}$ from 90 sec. to 60 sec. All membrane bodies are supplied complete with material certificate.


Short description

**easyFit Series – Insertion housings for vessels and pipings**

The static insertion housing easyFit allows quick and easy installation (vertically or laterally into vessels and pipings) of electrodes and sensors with Pg 13.5 thread. This allows the use of a large range of pH/ORP electrodes with solid or gel-type reference electrolyte as well as sensors for measuring dissolved oxygen. All medium wetted parts are made of stainless steel (easyFit 22) or CPVC (easyFit 21), plus Viton.

easyFit 21, 22

Drawings

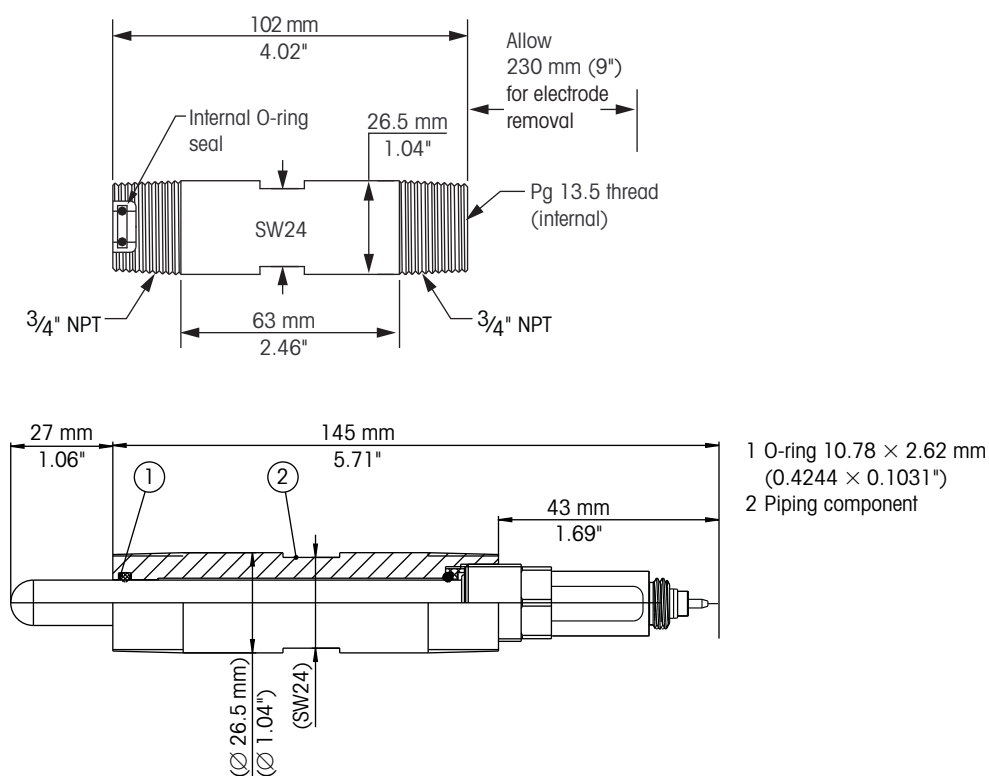

easyFit 21, 22

Specifications

Process conditions			
Housing	Material	Temperature	Max. admissible pressure [PS] / [TS]: (linear relation with plastic housings)
easyFit 21	CPVC	−5 ... 80 °C (23 ... 176 °F)	7.0 bar/65 °C (100 psig/149 °F) 3.5 bar/80 °C (50 psig/176 °F)
easyFit 22	1.4404	−5 ... 100 °C (23 ... 212 °F)	10 bar/100 °C (145 psig/212 °F)
Wetted materials		1.4404 or CPVC	
Wetted seals		Viton® (FKM)-FDA	

Ordering information

Housings	Order nr
easyFit 21	52 403 951
easyFit 22	52 403 952
Accessories	Order nr
O-ring 10.77 × 2.62 mm Viton® FDA	20 302 1000IG

Short description




easyFlow

easyFlow – flow-through housings


easyFlow flow-through housings serve for the direct fitting of METTLER TOLEDO electrodes and sensors for the measurement of pH, ORP and dissolved oxygen. The housings protect electrodes/sensors against mechanical damage. The plug-in connection allows easy, uncomplicated change of electrode/sensor. All parts of the housing which come into contact with the process medium are made of PVC or PSU (Polysulfone). Process-wetted O-rings are made of Viton®.

Drawings

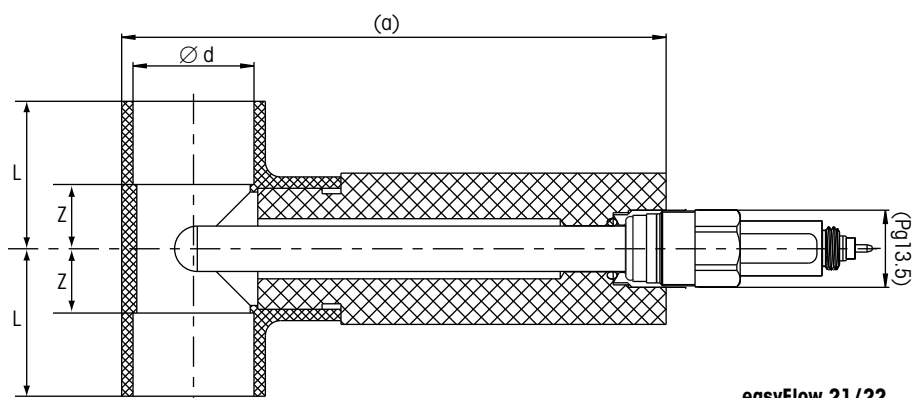

easyFlow 21/22

Drawings (cont.)

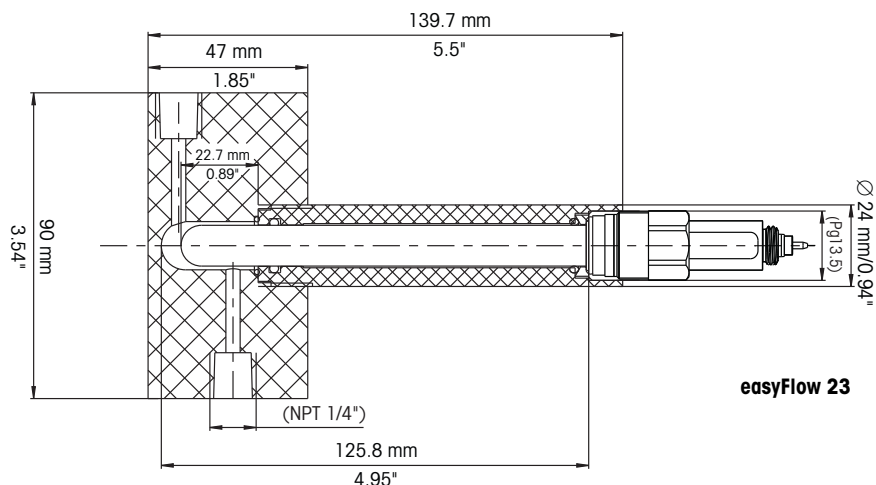

Specifications

	easyFlow 21/22	easyFlow 23
Ambient conditions		
Temperature	-5 ... 80 °C (23 ... 176 °F)	-5 ... 130 °C (23 ... 266 °F)
Max. admissible pressure	3.5 bar at 80 °C	7.0 bar at 130 °C
[PS]/[TS]¹ (linear relation)	50 psig at 176 °F	100 psig at 266 °F
Wetted material	CPVC	PSU (Polysulfone)
Wetted seals	Viton®-FDA	
Pressure domain	According to PED 97/23/EC, Article 1, Section 2.2: "Pressure" means pressure relative to atmospheric pressure, i.e. gauge pressure. As a consequence, vacuum is designated by a negative value.	
Certificates/Approvals	Declaration of conformity CE for the "Pressure equipment directive" (PED) 97/23/EC (excluded DN25)	

¹ Pressure rating according to PED 97/23/EC

Ordering information

Housings	Order nr
easyFlow 21 (US size)	52 403 953
easyFlow 22 (metric size)	52 403 954
easyFlow 23	52 403 955
Accessories	Order nr
O-ring set Viton® FDA for easyFlow 23	52 403 984

Short description



easyDip Series


easyDip – immersion housings for pH/ORP and dissolved oxygen

The new easyDip immersion housings of METTLER TOLEDO serve as an enclosure for our electrodes and sensors, and are specially designed and developed to suit applications in wastewater treatment. easyDip housings serve for the direct fitting of METTLER TOLEDO electrodes and sensors for the measurement of pH, ORP and dissolved oxygen, particularly in the field of industrial wastewater treatment. The housings protect electrodes/sensors against mechanical damage. The plug-in connection allows easy, uncomplicated change of electrode/sensor. All parts of the housing which come into contact with the process medium are made of PVC. Process-wetted O-rings are made of Viton®.


Specifications

Type	easyDip 21/22
Immersion length (H)	to be sourced locally: 1" PVC pipe or Ø 31 mm
Pressure range	ambient
Temperature range	0...60 °C (32 ... 140 °F)
Material	PVC, O-rings Viton®
Sensor interface	Ø 12 mm, a= 120 mm, Pg 13.5
Protective cage	yes (standard)

Drawings

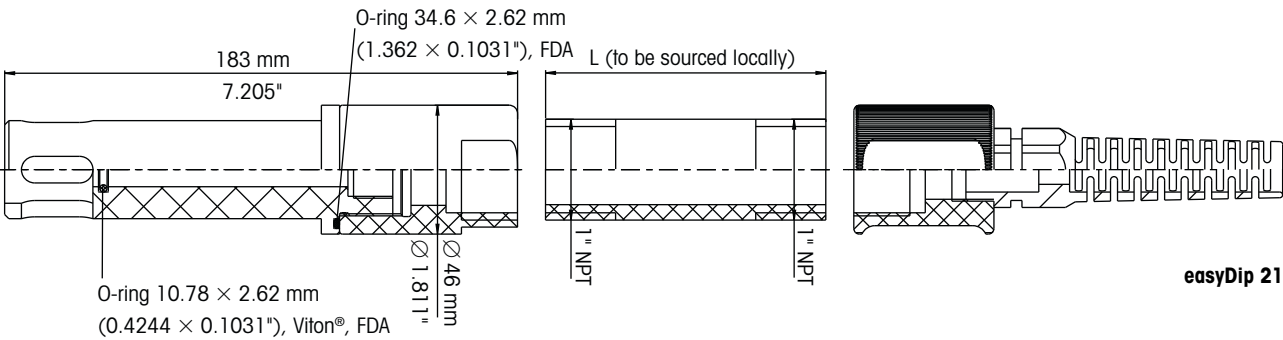

Drawings (cont.)

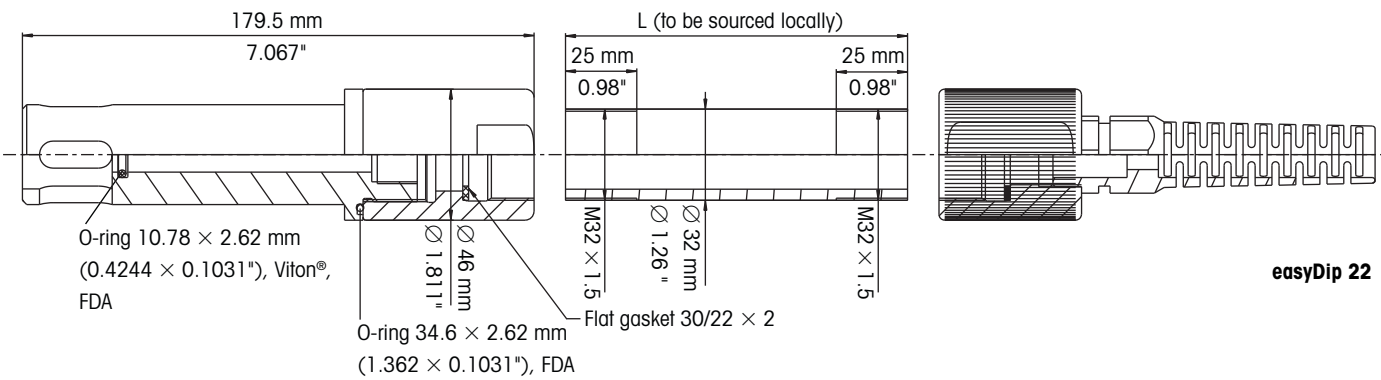

Ordering information

Housings	Order nr
easyDip 21	52 403 956
easyDip 22	52 403 957

Accessories	Order nr
O-ring set Viton® FDA for easyDip 21 and easyDip 22	52 403 985

Sensor accessories (required for pH, ORP, DO and 4-e Conductivity sensors)

AK9 coax cables (-25°C...70°C/-13°F...158°F)		
Cables connector	Cable length	Order nr
AK9	1 m (3.3 ft)	10 000 0102
AK9	3 m (9.8 ft)	10 000 0302
AK9	5 m (16.4 ft)	10 000 0502
AK9	10 m (32.8 ft)	10 000 1002
AK9	20 m (65.6 ft)	52 300 204

Sales and Service:

Australia

Mettler-Toledo Ltd.
220 Turner Street
Port Melbourne
AUS-3207 Melbourne/VIC
Phone +61 1300 659 761
Fax +61 3 9645 3935
e-mail info.mtaus@mt.com

Austria

Mettler-Toledo Ges.m.b.H.
Südrandstraße 17
A-1230 Wien
Phone +43 1 604 19 80
Fax +43 1 604 28 80
e-mail infoprocess.mtat@mt.com

Brazil

Mettler-Toledo Ind. e Com. Ltda.
Alameda Araguaia, 451
Alphaville
BR-06455-000 Barueri/SP
Phone +55 11 4166 7444
Fax +55 11 4166 7401
e-mail mettlert@mettler.com.br
service@mettler.com.br

China

Mettler-Toledo Instruments
(Shanghai) Co. Ltd.
589 Gui Ping Road
Cao He Jing
CN-200233 Shanghai
Phone +86 21 64 85 04 35
Fax +86 21 64 85 33 51
e-mail mtcs@public.sta.net.cn

Croatia

Mettler-Toledo d.o.o.
Mandlova 3
HR-10000 Zagreb
Phone +385 1 292 06 33
Fax +385 1 295 81 40
e-mail mt.zagreb@mt.com

Czech Republic

Mettler-Toledo s.r.o.
Trebohosticka 2283/2
CZ-100 00 Praha 10
Phone +420 2 72 123 150
Fax +420 2 72 123 170
e-mail sales.mtcz@mt.com

Denmark

Mettler-Toledo A/S
Naverland 8
DK-2600 Glostrup
Phone +45 43 27 08 00
Fax +45 43 27 08 28
e-mail info.mtdk@mt.com

France

Mettler-Toledo
Analyse Industrielle S.A.S.
30, Boulevard de Douaumont
BP 949
F-75829 Paris Cedex 17
Phone +33 1 47 37 06 00
Fax +33 1 47 37 46 26
e-mail mtpro-f@mt.com

Germany

Mettler-Toledo GmbH
Prozeßanalytik
Ockerweg 3
D-35396 Gießen
Phone +49 641 507 333
Fax +49 641 507 397
e-mail prozess@mt.com

Great Britain

Mettler-Toledo LTD
64 Boston Road, Beaumont Leys
GB-Leicester LE4 1AW
Phone +44 116 235 7070
Fax +44 116 236 5500
e-mail enquire.mtuk@mt.com

Hungary

Mettler-Toledo Kereskedelmi KFT
Teve u. 41
HU-1139 Budapest
Phone +36 1 288 40 40
Fax +36 1 288 40 50
e-mail mthu@axelero.hu

India

Mettler-Toledo India Private Limited
Amar Hill, Saki Vihar Road
Powai
IN-400 072 Mumbai
Phone +91 22 2857 0808
Fax +91 22 2857 5071
e-mail sales.mtin@mt.com

Italy

Mettler-Toledo S.p.A.
Via Vialba 42
I-20026 Novate Milanese
Phone +39 02 333 321
Fax +39 02 356 2973
e-mail customercare.italia@mt.com

Japan

Mettler-Toledo K.K.
Process Division
4F Izumikan Sanbancho Bldg.
3-8 Sanbancho
Chiyoda-ku
JP-102-0075 Tokyo
Tel. +81 3 3222 7103
Fax +81 3 3222 7118
e-mail helpdesk.ing.jp@mt.com

Malaysia

Mettler-Toledo (M) Sdn Bhd
Bangunan Electrocon Holding, U 1-01
Lot 8 Jalan Astaka U8/84
Seksyen U8, Bukit Jelutong
MY-40150 Shah Alam Selangor
Phone +60 3 78 44 58 88
Fax +60 3 78 45 87 73
e-mail
MT-MY.CustomerSupport@mt.com

Mexico

Mettler-Toledo S.A. de C.V.
Ejercito Nacional #340
Col. Chapultepec Morales
Del. Miguel Hidalgo
MX-11570 México D.F.
Tel. +52 55 1946 0900
e-mail ventas.lab@mt.com

Poland

Mettler-Toledo (Poland) Sp.z.o.o.
ul. Poleczki 21
PL-02-822 Warszawa
Phone +48 22 545 06 80
Fax +48 22 545 06 88
e-mail polska@mt.com

Russia

Mettler-Toledo Vostok ZAO
Sretenskij Bulvar 6/1
Office 6
RU-101000 Moscow
Phone +7 495 621 56 66
Fax +7 495 621 63 53
e-mail inforus@mt.com

Singapore

Mettler-Toledo (S) Pte. Ltd.
Block 28
Ayer Rajah Crescent #05-01
SG-139959 Singapore
Phone +65 6890 00 11
Fax +65 6890 00 12
+65 6890 00 13
e-mail precision@mt.com

Slovakia

Mettler-Toledo s.r.o.
Hattalova 12/A
SK-831 03 Bratislava
Phone +421 2 4444 12 20-2
Fax +421 2 4444 12 23
e-mail predaj@mt.com

Slovenia

Mettler-Toledo d.o.o.
Pot heroja Trtnika 26
SI-1261 Ljubljana-Dobrunje
Phone +386 1 530 80 50
Fax +386 1 562 17 89
e-mail keith.racman@mt.com

South Korea

Mettler-Toledo (Korea) Ltd.
Yeil Building 1 & 2 F
124-5, YangJe-Dong
SeCho-Ku
KR-137-130 Seoul
Phone +82 2 3498 3500
Fax +82 2 3498 3555
e-mail Sales_MTKR@mt.com

Spain

Mettler-Toledo S.A.E.
C/Miguel Hernández, 69-71
ES-08908 L'Hospitalet de Llobregat
(Barcelona)
Phone +34 93 223 76 00
Fax +34 93 223 76 01
e-mail bcn.centralita@mt.com

Sweden

Mettler-Toledo AB
Virkesvägen 10
Box 92161
SE-12008 Stockholm
Phone +46 8 702 50 00
Fax +46 8 642 45 62
e-mail sales.mts@mt.com

Switzerland

Mettler-Toledo (Schweiz) GmbH
Im Langacher
Postfach
CH-8606 Greifensee
Phone +41 44 944 45 45
Fax +41 44 944 45 10
e-mail salesola.ch@mt.com

Thailand

Mettler-Toledo (Thailand) Ltd.
272 Soi Soonvijai 4
Rama 9 Rd., Bangkok
Huay Kwang
TH-10320 Bangkok
Phone +66 2 723 03 00
Fax +66 2 719 64 79
e-mail
MT-TH.ProcessSupport@mt.com

USA/Canada

Mettler-Toledo, Inc.
36 Middlesex Turnpike
Bedford, MA 01730, USA
Phone +1 781 301 8600
Freephone +1 800 642 4418
Fax +1 781 271 0214
e-mail mtprou@mt.com



Management System
certified according to
ISO 9001 / ISO 14001



Subject to technical changes.
© Mettler-Toledo AG, Process Analytics
05/10. Printed in Switzerland. 52 121 499

Mettler-Toledo AG, Process Analytics
Im Hackacker 15, CH-8902 Urdorf, Switzerland
Phone +41 44 729 62 11, Fax +41 44 729 66 36

www.mt.com/pro