

QuickTake 30

Operating Instructions Cat. No. 228-9530



**SKC Inc.
863 Valley View Road
Eighty Four, PA 15330 USA**

Form 40079 Rev 1402

Table of Contents

Quick Guide 1

Description.....3

Performance Profile4

Battery Operation6

Operation.....9

Mounting Sampling Media 11

Calibration and Setting Flow 13

Setup..... 14

Sampling 16

Advanced Setup 18

Maintenance.....22

Warranty22

Ordering Information.....23

QuickTake 30 Quick Guide

Terms »

Star Button *

Turns on LED, toggles between displays, and exits without saving

Up and Down Arrow Buttons ▲▼

Scroll through presets, increase or decrease sampling parameters, and toggle between setup options

Button Sequence

▲ or ▼ = Press individually

[▲▼] = Press both simultaneously

▲▼ = Security code, press in sequence

Programming Sequences »

• To activate pump LED:

Press and hold * for 2 seconds.

• To check battery status:

Press *.

• To choose a run time preset:

Press ▲ or ▼ to scroll through presets. Once desired preset displays, press [▲▼] to start sampling.

• To Run or Hold:

Press [▲▼].

• To repeat a sample run:

From Done, reset (rSEt), or sampling error (SErr), press [▲▼] to return to run time preset. Press [▲▼] to sample.

• To change or calibrate flow:

Note: Flow rate does not appear on LED.

Press ▲ or ▼ and scroll to a run time preset. Press and hold CAL for 2 seconds. (Does not require a security code.) Press ▲ or ▼ to change flow rate until desired flow appears on calibrator. Press *. When Stor displays, press [▲▼] to save setting or * to ignore changes to flow setting.

• To interrupt run, terminate a sample, or reset pump:

While in Hold, press *. Sample reset (rSEt) will display. Press [▲▼] to reset pump or * to ignore reset and return to Hold.

www.skcinco.com

SKC Inc., 863 Valley View Road, Eighty Four, PA 15330

Description


The QuickTake® 30 Sample Pump is a portable battery-powered air sampling pump that maintains constant airflow from 10 to 30 L/min for use with impactors, spore trap cassettes such as VersaTrap®, asbestos cassettes, microvacuum cassettes, or other samplers requiring flows up to 30 L/min. A diaphragm pump operating with a closed loop flow control system, the QuickTake 30 maintains true constant flow. The QuickTake 30 features a programmable timer that provides up to eight programmable run time presets of 1 to 999 minutes, continuous run with manual shut-off, or intermittent sampling. A rechargeable lithium-ion battery pack provides effective run times (*see Performance Profile - Typical Cumulative Run Time on page 4*).



Cassette Adapter



Tubing Adapter

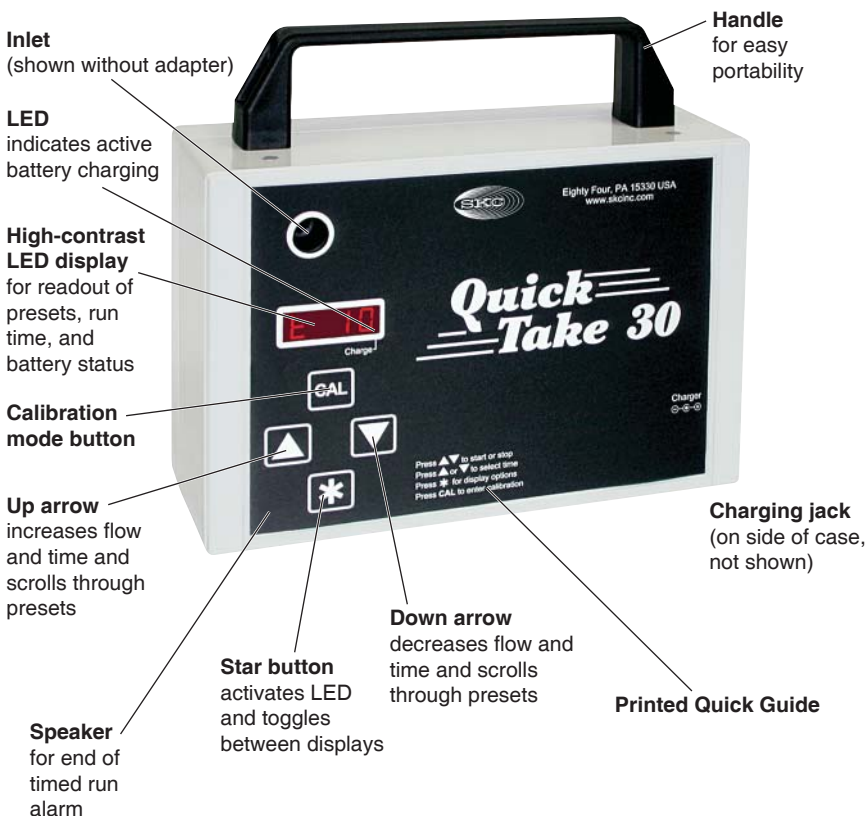

Inlet
(shown without adapter)

LED
indicates active
battery charging

**High-contrast
LED display**
for readout of
presets, run
time, and
battery status

**Calibration
mode button**

Up arrow
increases flow
and time and
scrolls through
presets

Speaker
for end of
timed run
alarm

Star button
activates LED
and toggles
between displays

Down arrow
decreases flow and
time and scrolls
through presets

Printed Quick Guide

Handle
for easy
portability

Charging jack
(on side of case,
not shown)

Performance Profile

Flow Range:	10 to 30 L/min
Flow Compensation Accuracy:	± 5% of set flow
Compensating Flow	10 L/min at 90 inches water back pressure
Back Pressure Range:	20 L/min at 50 inches water back pressure 30 L/min at 15 inches water back pressure

Typical Back Pressure of Sampling Media (*inches water*)

Flow Rate (L/min)	10	12	15	20
Filter/Pore Size (µm)				
25-mm MCE, 0.8	65	80	103	148
25-mm MCE, 0.45	138	172	> 200	—
37-mm MCE, 0.8	22	28	36	51
37-mm PVC, 5.0	9	11	15	21

Compare the information in this table to pump compensation range to determine appropriate applications.

- Power:**
- **Rechargeable lithium-ion (Li-Ion) battery**, 7.4 V, 9.6-Ah capacity, 71.04 Wh
 - **Battery with AC charger/adaptor**, 100-240 V

Battery Recharge Time: Approximately 5 hrs

(varies with battery capacity
and level of discharge)

**Typical Cumulative
Run Time:†**

Spore Trap* (e.g., VersaTrap): 5 hrs at 15 L/min (*battery only*)

BioStage viable cascade impactor: 4 hrs at 28.3 L/min (*battery only*)

25-mm, 1.2-µm MCE filter: 9+ hrs at 10 L/min

To achieve, use QuickTake 30 with a fully
charged battery **and** AC charger/adaptor.

37-mm, 0.8-µm MCE filter: > 14 hrs at 10 L/min (*battery only*)

* Sampling times when using spore traps are usually ≤ 10 min. SKC
recommends reducing length of sample time when using a 30 L/min
flow rate to prevent overloading the media.

† Results obtained using a new pump and new fully charged batteries. Pump and
battery performance may vary.



*The AC charger/adaptor can be used to extend battery run
time, but it is not a battery eliminator. Therefore, it will
not provide indefinite run times.*

Temperature:	Operating: 32 to 113 F (0 to 45 C)
	Storage: -4 to 95 F (-20 to 35 C)
	Charging: 32 to 113 F (0 to 45 C)

Operating Humidity: 0 to 95% non-condensing



Protect sample pump from weather when in use outdoors.

Run Time Features:	User-selectable features, user-adjustable presets (<i>see Advanced Setup</i>)
Preset timed runs:	1, 2, 5, 10, or 15 min
Manually set continuous run with manual shut-off:	1 to 999 min (repeats 1 to 999-min runs indefinitely until user stops pump or power supply is depleted)
Intermittent sampling:	<i>See Advanced Setup</i>
Flow Fault Features:	If the pump is unable to compensate due to excessive back pressure, the pump will go into flow fault mode (<i>see page 17 for details</i>). Flow fault features are enabled as the default setting. Flow fault may be disabled at the user's option. <i>See Advanced Setup.</i>
Flow fault:	Flow fault displays immediately Pump shuts off after 5 seconds
Fault restart:	Pump attempts restart every 10 seconds up to five times
Media Compatibility:	Viable cascade impactors, spore trap cassettes (e.g., VersaTrap), asbestos cassettes, microvacuum cassettes, and other impaction samplers that require flows from 10 to 30 L/min
Tubing:	Requires 3/8-in ID tubing
Housing:	ABS plastic
Dimensions:	9.3 x 8.4 x 3.5 in (23.6 x 21.3 x 8.9 cm)
Weight:	4.8 lbs (2.2 kg)



Indicates a warning, caution, or note

Battery Operation

Battery Status Indicators

Full charge; approximately 75% to 100% battery capacity remaining

Battery is charged enough to operate the pump; approximately 25% to 75% battery capacity remaining.

Battery charge is low (charge battery); approximately 1% to 25% battery capacity remaining.

Low Battery Fault. Pump will stop running, beep, and go to sleep in 10 seconds.

Charging the Battery

For a complete charge, ensure the pump is **not** running during charging. Insert the charger plug into the jack on the pump and the charger into a wall outlet. A red LED will flash on the pump display to indicate the unit is charging. When charging is complete, the LED will stop flashing and the pump will go to sleep. The battery charges completely in five hours. The QuickTake 30 can be operated using AC power. See *Operating from AC Power* on page 8.



After charging the battery pack, it is good practice to run the pump for approximately 5 minutes before calibrating. This ensures the battery is in more steady-state conditions and improves the agreement in pre and post-sampling calibrations.



- *The pump will not sleep during charging. Connecting a sleeping pump to the charger will wake it up from sleep.*
- *The AC charger/adaptor can be used to extend battery run time, but it is not a battery eliminator. Therefore, it will not provide indefinite run times.*
- *Do not operate or charge the pump in hazardous locations.*
- *Use only the SKC-approved charger for this pump. Use of an unapproved charger may damage the battery and the pump and voids any warranty.*
- *The battery pack may be kept on the SKC-approved charger for an indefinite time.*
- *Ensure proper orientation of the charging cable before plugging it into the charging jack. Improper orientation/contact will short circuit the battery and voids any warranty.*
- *Short-circuiting the battery pack will render it immediately inoperative.*
- *Failure to follow warnings and cautions voids any warranty.*



See www.skcinc.com/instructions/1756.pdf for more information on SKC pump batteries.

Installing a Replacement Battery


1. With the back of the pump facing you (serial number at bottom left), use a small flat-head screwdriver (tweaker) to pry up and remove two strip panels from the left and right ends of the back of the case. Removing the pressure-fit panels will reveal four safety screws.
2. Use a Phillips head or flat-head screwdriver to loosen the four safety screws.
3. Lift off the back of the pump case.



4. Using a Phillips head screwdriver, remove the two screws and washers from the battery bracket. Set them aside.




Do not lose washer from beneath each screw.

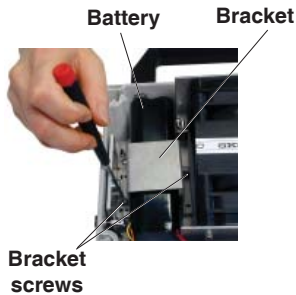

Slide bracket forward and lift out.



5. Slide the bracket forward and lift it out of the case.
6. Carefully lift the battery pack out of the case and detach it from the battery connector.

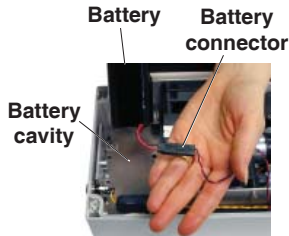

Battery connector pulls apart.



7. Attach the new battery to the connector.
8. Replace the battery pack in the pump case.
9. Slide the battery bracket in place and align the two screw holes. Reinstall the two screws with washers.
10. Replace the back of the pump case (serial number label should be in the lower left corner) and tighten the four safety screws.
11. Replace the two strip panels and press them down until completely installed.

Operating from AC Power

The QuickTake 30 may be run using AC power with the battery and AC charger/adaptor. Insert the charger plug into the jack on the pump and the charger into a standard wall outlet. Operate the pump.

Cautions, Warnings, and Notes

- *The charge light on the LED will flash if the battery is charging during AC operation.*
- *The AC charger/adaptor can be used to extend battery run time, but it is not a battery eliminator. Therefore, it will not provide indefinite run times.*
- *Do not operate or charge the pump in hazardous locations.*
- *Use only the SKC-approved battery and charger for this pump. Use of an unapproved battery and/or charger may damage the battery and the pump and voids any warranty.*
- *To reduce risk of injury, fire, or electric shock, always follow basic safety precautions when using this product.*
- *Do not submerge the pump or subject it to any liquids.*
- *Protect the sample pump from weather when in use outdoors.*
- *Tampering with the battery pack or using a repaired or rebuilt battery pack voids any warranty and UL Listing for intrinsic safety.*
- *Do not open, disassemble, short circuit, crush, incinerate, or expose the battery to fire or high temperatures.*
- *Failure to follow warnings or cautions voids any warranty.*

Operation

Button Sequence

Buttons must be pressed in the sequence shown.

▲ or ▼ = Press individually

[▲▼] = Press both simultaneously

▲▼ = Security code, press in sequence



Operating the Pump

- **To activate LED:**

Press and hold * for 2 seconds.

- **To check battery status:**


With the LED on, press *. If battery status is low, recharge the battery (see *Charging the Battery on page 6*).

Battery Status Indicators


Full charge; approximately 75 to 100% battery capacity remaining




Battery is charged enough to operate the pump; approximately 25 to 75% battery capacity remaining.



Battery charge is low (charge battery); approximately 1 to 25% battery capacity remaining.



Low Battery Fault. Pump will stop running, beep, and go to sleep in 10 seconds.




- **To navigate presets and displays:**

Press ▲ or ▼ to scroll through presets or displays.

- **To select a run time preset and run the pump:**

Scroll to desired run time preset.

Select preset by pressing [▲▼]. The pump will start to run.

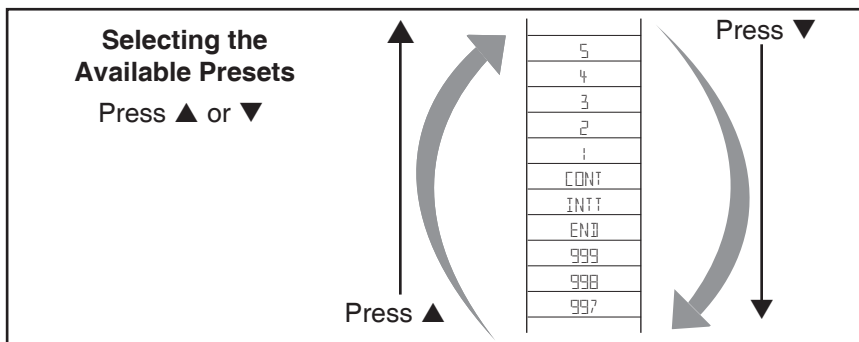

- **To run the pump:**

Press [▲▼].

- **To place the pump in hold:**

Press [▲▼].

- **To repeat a sample run:**

From Done, reset (rSet), or sampling error (SErr), press [▲▼] to return to run time preset. Press [▲▼] to sample.

- **To turn off LED:**

The pump automatically turns off LED after it is idle for 4 minutes. User can reactivate the LED by pressing and holding *.

- **To interrupt a run, terminate a sample, or reset a pump:**

From Hold, press *. Sample reset (rSet) will display. Press [▲▼] to reset the pump or * to ignore the reset and return to Hold.

- **To set flow or calibrate:**

See Calibration and Setting Flow for details.

1. Connect a calibrator to the pump inlet.
2. Scroll to any run time preset. Press and hold CAL for 2 seconds to enter calibration mode (pump will start running).
3. Press ▲ or ▼ to change flow rate until desired flow appears on the calibrator (flow rate does not display on LED).
4. Press * and Stor will display. Press [▲▼] to save setting or * to ignore changes.

Mounting Sampling Media

Spore Trap Cassette


Use the cassette adapter supplied with the pump.

Insert the tube end of the adapter into the pump inlet up to the flange. Remove the seal from the outlet of the cassette and push the cassette onto the bowl end of the adapter until a firm seal is established.



Calibration Note: Flow rate can be calibrated by pushing the bowl end of a second cassette adapter onto the spore trap cassette inlet (seal removed), attaching flexible tubing to the tube end of the second adapter, and attaching the other end of the flexible tubing to the outlet of a calibrator.

Sampling Wand Accessory (Cat. No. 228-9521)

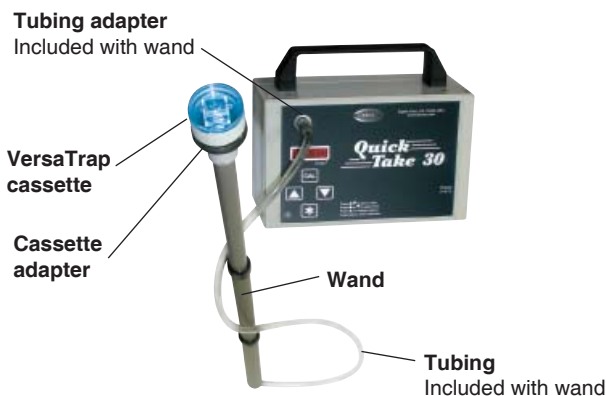

Insert the tube end of a cassette adapter into the hole on the top end of the sampling wand accessory (*see above*) up to the center flange. Remove the seal from the outlet of the cassette and push the cassette onto the bowl end of the adapter until a firm seal is established. Insert the tubing adapter on the flexible tubing (supplied with wand) into the pump inlet up to the center flange.




For bioaerosol sampling at 15 L/min, SKC recommends using the Leland Legacy® pump (5 to 15 L/min) or the QuickTake 30 pump (10 to 30 L/min).

BioStage Impactor

Use with Mounting Bracket accessory (Cat. No. 228-9531).

1. Place the BioStage® on the L-shaped bracket. Align the BioStage outlet to the 10 o'clock position on the bracket. Secure with thumbscrew on the bottom of the bracket.

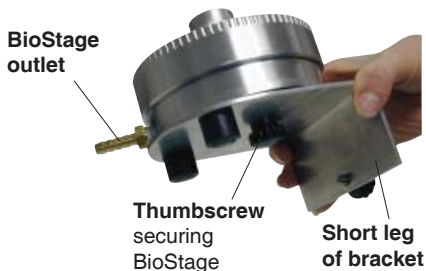

2. Place the L-shaped bracket to the right on the pump faceplate with the short leg of the bracket fitting over the right edge of the pump. Align the hole on the short leg of the bracket with the hole on the side of the pump. Secure the bracket to the pump with the thumbscrew.



3. Insert the inlet adapter (included with bracket) into the pump inlet and connect the inlet adapter tubing to the BioStage outlet.



Calibration and Setting Flow




Use a primary standard calibrator to calibrate pump flow rate.



Calibrate the flow rate with a representative sampling medium in line.




Before use, allow the pump to equilibrate after moving it from one temperature extreme to another.

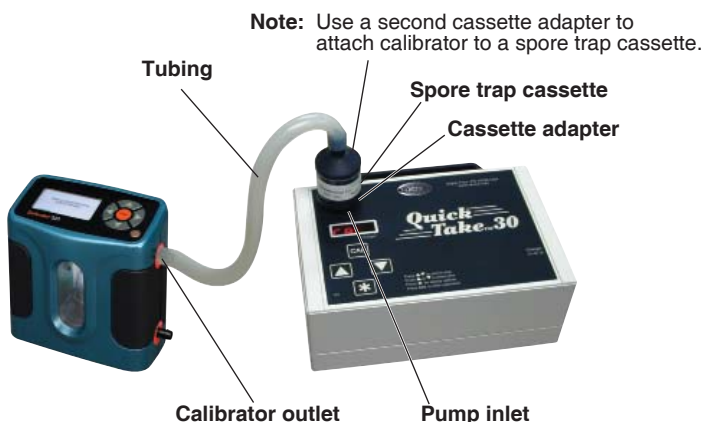


Calibration with a spore trap cassette

1. Ensure the pump has run for 5 minutes before calibrating. Using 3/8-inch ID flexible tubing and appropriate adapters, connect the inlet of the pump to the outlet of a representative sampling medium and a primary standard calibrator to the inlet of the representative sampling medium (as shown above).
2. Scroll to any run time preset. Press and hold the CAL button for two seconds. The pump will start running and a flashing CAL will appear on the LED.
3. Press ▲ or ▼ to increase or decrease the flow until the desired flow rate is displayed on the calibrator.
4. Press ✱. A flashing Stor will appear on the LED.
To save new setting: Press [▲▼]. The pump will stop running.
To ignore new setting: Press ✱. The pump will stop running.



*Digital display:
Calibration mode*



*Digital display:
Store setting*

Note: A security code is not needed to change flow rate. It is only required when changing factory settings. To change factory settings, see *Advanced Setup*.

Setup

Press ▲ or ▼ to scroll through the run time presets on the LED.

Run Time Mode

Timed Run (defaults: 15, 10, 5, 2, and 1 min)

Intermittent Sampling

Continuous Run

LED Display

t xx

Intt

Cont

The user may change run time presets. *See Advanced Setup, Programming Your Own Run Time Presets.*

Timed Run

Run time accumulates only while the pump is running.

Timed Run mode is designed to perform one sample for a predetermined time from 1 to 999 minutes (selected from presets). The user starts the pump running and the pump automatically stops running after the sample time has elapsed.



*Digital display:
Timed Run 2 minutes*

1. Press ▲ or ▼ to scroll to the desired run time preset.
2. Press [▲▼] to select the desired preset. The pump will start running and the LED will display a count down to zero (run time remaining below one minute is displayed in seconds with a colon). The pump will stop and beep four times. The display will flash Done.
3. Press * to return to the run time preset display. If the user wishes to repeat the sample, press [▲▼].



*Digital display:
Run time remaining is
2 seconds*




*Digital display:
Sample run completed*

User Options During Timed Run Sampling


Viewing battery status

Press *. Display will automatically return to run time remaining after five seconds or press * again.




Hold mode

Press [▲▼] while the sample is running to place the pump and timer in Hold. Run time remaining and Hold will display alternately. Press [▲▼] while in Hold to continue the sample run.



Terminating a sample and resetting the pump

Press * while in Hold. Sample Reset (rSEt) will flash on the LED.



To terminate the sample and reset the pump: Press [▲▼].

To continue the sample run: Press * to return the display to Hold. Press [▲▼].

Continuous Run with Manual Stop

Run time accumulates only while the pump is running.

Continuous Run mode performs one sample from 1 to 999 minutes, then automatically resets to zero and counts up to 999 again until the user manually stops the pump.



*Digital display:
Continuous Run*

1. Press ▲ or ▼ to scroll to Cont. Press [▲▼] to select it.
The pump will start and the LED will display cumulative run time up to 59 seconds in seconds, then switch to minutes. The timer will count up to 999 minutes, automatically reset to zero, and count up to 999 minutes again until the user manually stops the pump.
2. Press [▲▼] to place the pump in Hold when the desired sampling time has elapsed. The LED will display cumulative run time and Hold alternately.
To continue the sample run: Press [▲▼].
To terminate the sample and reset the pump: Press * while in Hold. Sample Reset (rSET) will flash on the LED. Press [▲▼].

User Options During Continuous Run Sampling


Viewing battery status

Press *. Display will automatically return to cumulative run time after five seconds or press * again.



Hold mode

Press [▲▼] while the sample is running to place the pump and timer in Hold. Hold and cumulative run time will display alternately.
Press [▲▼] while in Hold to continue the sample run.



Terminating a sample and resetting the pump

Press * while in Hold. Sample Reset (rSET) will flash on the LED.



To terminate the sample and reset the pump: Press [▲▼].

To continue the sample run: Press * to return the display to Hold.
Press [▲▼].

For Intermittent Sampling, see Advanced Setup.

Sampling



QuickTake 30 with cassette adapter and a spore trap cassette



Before use, allow the pump to equilibrate after moving it from one temperature extreme to another.

1. Ensure that the battery has sufficient capacity for the desired sampling time (see *Operation, Battery Status Indicators*).
2. Calibrate the QuickTake 30 for the desired flow rate (see *Calibration and Setting Flow*).
3. Place the pump in the sampling location.



Protect the sample pump from weather when in use outdoors.



Do not operate or charge the pump in hazardous locations.

4. Replace the representative sampling medium used for calibration with a fresh unexposed sampling medium.
5. Press ▲ or ▼ to scroll to a run time preset. See *Timed Run, Continuous Run, or Intermittent Sampling*.
6. Once the desired preset is displayed, press [▲▼] to start the pump running. Record sample start time.



*If the user wishes to stop sampling and reset the pump, see **Terminating a Sample and Resetting the Pump**.*

7. When sampling is completed:
 - a. **Timed Run mode** - The display will count down to zero and the pump will stop. The alarm will beep four times. The display will flash Done. Press * to return to presets. If a repeat sample is desired, press [▲▼].
 - b. **Continuous Run mode** - The timer will count up to 999 minutes, automatically reset to zero, and count again to 999 minutes until user stops the pump. Press [▲▼] to place the pump in Hold when the desired sampling time has elapsed. Hold and cumulative run time will flash alternately. Press * while in Hold. Sample reset (rSEt) will appear on the LED. Press [▲▼] to terminate the cumulative run and reset the pump. If a repeat sample is desired, press [▲▼].
 - c. **Intermittent Sampling mode** - The display will count up to set run time, count down from set delay time to 0, then run again. The pump will cycle until the programmed number of cycles are completed. The alarm will beep four times. The display will flash Done. Press [▲▼] to return to the run time preset. If a repeat sample is desired, press [▲▼].

done

*Digital display:
Sample run completed*

Hold

*Digital display:
Pump and Timer in Hold*

rSEt

*Digital display:
Terminate sample and
reset pump*


C 5

*Digital display:
Cumulative run time*

8. Remove and seal the sample medium.
9. Re-assemble the calibration train (*see Calibration and Setting Flow*) and verify flow.
10. Send sample, blanks, and pertinent sampling information to a laboratory for analysis.


Terminating a Sample and Resetting the Pump

For timed and continuous runs: from a running pump, press [▲▼]. The pump is now in Hold. Press * while in Hold. Sample reset (rSEt) will display. Press [▲▼] to zero the cumulative run time and reset the pump.



*Digital display:
Terminate sample and
reset pump*

For intermittent sampling, there is no Hold. Press [▲▼] to stop the pump. The LED will display SErr (sampling error). Press * to view cumulative run time. Press [▲▼] to return to run time presets.



*Digital display:
Sampling Error*




Cumulative run time resets to 0 even if intermittent sampling is started again.

Flow Fault

Manufacturer default: enabled. User may disable feature.

If the pump is not able to compensate due to excessive back pressure, a flashing FLOF will appear on the LED. If the fault is not corrected within five seconds, the pump will beep four times and stop running.



*Digital display:
Flow fault*

Restoring Sampling from a Flow Fault

Fault restart (manufacturer default: enabled)

Fault restart will attempt to restart the pump every 10 seconds up to five times. Cumulative run time can be displayed by pressing *. Press * again to return to the fault (FLOF) display. If the pump does not automatically restart, attempt to correct the flow blockage, then press [▲▼] to place the pump in Hold. Press [▲▼] to resume sampling.

Fault restart (user disabled)

Cumulative run time can be displayed by pressing *. Press * again to return to the FLOF display. Attempt to correct flow blockage and press [▲▼] to place the pump in Hold. Press [▲▼] to resume sampling.




The flow fault and flow fault restart features can be enabled or disabled by the user as desired. See Advanced Setup, Enabling/Disabling Alarm and Fault Features.

Advanced Setup

Intermittent Sampling

Intermittent Sampling allows the pump to be programmed to run for a specific number of minutes up to 999, to shut off for a programmed length of time, and to continue sampling on and off for a predetermined number of cycles (e.g., program the pump to run three cycles (n) of 15 minutes each (r) with a five-minute delay (d) between each cycle).



Digital display:
Intermittent Sampling

Entering Intermittent Sampling Mode


Press ▲ or ▼ to scroll to Intt. Press * to enter the intermittent sampling setup mode.

Setting Run Time (r)

1. Press ▲ or ▼ to increase or decrease run time. The display will flash. If no change to run time is desired, press * to move to delay time.
2. When finished, press *. Stor will flash on the display.

To save the new setting: Press [▲▼]. Press * to move to delay time setup.

To ignore the new setting: Press *. Display will move to the delay time.



Digital display:
Set run time



*If displayed values are not changed, the flashing Stor will not appear and pressing * will move the display to the next parameter to be set.*


Setting Delay Time (d)

1. Press ▲ or ▼ to increase or decrease delay time. The display will flash. If no change to delay time is desired, press * to move to number of cycles.

2. When finished, press *. Stor will flash on the display.

To save the new setting: Press [▲▼]. Press * to move to number of cycles setup.

To ignore the new setting: Press *. Display will move to the number of cycles.



Digital display:
Set delay time

Setting the Number of Cycles (n)

1. Press ▲ or ▼ to increase or decrease the number of cycles. The display will flash. If no change to the number of cycles is desired, press ✱ to return to Intt.
2. When finished, press ✱. Stor will flash on the display.

To save the new setting: Press [▲▼]. Press ✱ to return to Intt.

To ignore the new setting: Press ✱. The LED will return to Intt.



Digital display:
Set number of cycles

Start sampling by pressing [▲▼]. The LED will count up to 59 seconds, then switch to minutes up to the set minutes run time. The pump will stop for the programmed number of delay minutes while the LED displays a count down from the set delay time to zero. The pump will start sampling again. The pump will beep four times and the display will flash donE after the desired cycles are completed. Press ✱ to display cumulative run time. Press ✱ to return to donE. Press [▲▼] to return the display to the run time preset. If a repeat sample is desired, press [▲▼].



Digital display:
Sample run completed





Intermittent sampling settings are retained when the pump goes to sleep.

User Options During Intermittent Sampling


Viewing number of cycles remaining and cumulative run time

Press ✱ repeatedly while the sample or delay is running. If the unit is left untouched for five seconds, the display will automatically return to cumulative time.



Terminating a sample and resetting the pump

There is no Hold available in intermittent sampling. Therefore, pressing [▲▼] will stop the sampling and the LED will display SErr (sampling error). Press ✱ to view cumulative run time. Press [▲▼] to return to run time presets.



Programming Your Own Run Time Presets

1. Press **⬤▲▼⬤**.
2. Pt: 1 will alternately display with T xx. This corresponds to the first stored preset time.
3. Press **▲** to scroll to the number of minutes (1 to 999). Press **▼** to scroll to Cont, Intt, or End mode options. *End will not appear as an option during setup of the first preset.*
4. When the LED displays the desired time or mode, press **⬤** to move to the next preset time.
5. Repeat Steps 3 and 4 for each preset up to eight presets. The sequence will repeat from one to eight.
6. When finished, press **[▲▼]**. Stor will display on the LED.

To save the new settings: Press **[▲▼]**. The pump will return to normal pump operation.

To ignore the new settings: Press **⬤**. The pump will return to normal pump operation.

*Digital display:
First preset*

*Digital Display:
Time set for preset 1*

*Digital display:
Store settings*

Note: While programming presets, scrolling below Intt will display End after the first preset is selected. Choosing End will truncate the stored preset sequence (*see below*). For example, if the user desires to store only two presets, preset time 3 can be set to End, shortening the number of presets to scroll through. Times programmed for preset times Pt: 4 through 8 will not display until the presets are changed to make them display or the factory defaults are reset (*see Resetting Pump to Manufacturer Default Settings*).

Presets Sequence

Preset 8	End
Preset 7	Intt
Preset 6	Cont
Preset 5	t 15
Preset 4	t 10
Preset 3	t 5
Preset 2	t 2
Preset 1	t 1

Manufacturer Default Presets

Preset 8	End
Preset 7	Intt
Preset 6	Cont
Preset 5	t 1 - 999
Preset 4	End
Preset 3	t 1 - 999
Preset 2	t 1 - 999
Preset 1	t 1 - 999

*The pump returns to the beginning preset at the first End it encounters. This allows the user to shorten the number of presets to be scrolled through. **Preset 1 cannot be set to End.***

Enabling/Disabling Alarm and Fault Features

1. Press the security code *▲▼* to enter setup mode.
2. Press CAL. The pump software version number will display briefly.
3. Press ▲ or ▼ to turn feature on or off (*see below*). Press * to advance to next feature.
4. Press [▲▼] to exit feature setup. Press [▲▼] again to return to run time presets.

Feature

Button Beeper: On/Off

ON
bbP 1

Digital display:
Button beep on

OFF
bbP 0

Digital display:
Button beep off

Alarm Beeper: On/Off

AbP 1

Digital display:
Alarm beep on

AbP 0

Digital display:
Alarm beep off

Flow Fault: On/Off

FFt 1

Digital display:
Flow fault on

FFt 0

Digital display:
Flow fault off

Flow Fault Restart: On/Off

Fr t 1

Digital display:
Flow restart on

Fr t 0

Digital display:
Flow restart off

Resetting Pump to Manufacturer Default Settings

1. Press the security code *▲▼* and then press the CAL button. The pump software version number will display briefly.
2. Press * repeatedly to scroll through until the LED displays dEft.
3. Press [▲▼]. The word no will appear on the display.
To reset to factory default settings: Press *. YES will appear on the display. Press [▲▼].
To retain existing settings: Press * to scroll to no and press [▲▼].

dEft

Digital display:
Pump default

4E5

Digital display:
Yes, reset to pump default

no

Digital display:
No, do not reset to pump default

The number 30 will appear briefly, then the display will return to run time presets.

Maintenance

1. Keep the pump clean and free of dust and dirt. It may be wiped with a dry cloth.
2. Keep the battery charged (*see Battery Operation on page 6*). Charge periodically when pump is not used for prolonged periods.

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skcinc.com/warranty.asp>.

Li-Ion Battery Shipment

Rechargeable lithium-ion batteries for use with SKC sample pumps have been tested in accordance with the UN Manual and are proven to meet requirements of each test in the *UN Manual of Test Criteria*, Part II, subsection 38.3. They have a watt-hour (Wh) rating below 100.

Per 2013 IATA regulations for air shipments, packaging must meet the specifications of and contain labeling and documentation required by IATA Packaging Instructions 967 (UN 3481, Section II), 966 (UN 3481, Section II), and 965 (UN 3480, Sections IA > 10 Kg G and IB 2.5 to 10 Kg G). *See IATA Lithium Battery Guidance Document: Transport of Lithium Metal and Lithium Ion Batteries, Revised for the 2013 Regulations*



Any warranty is void if pumps are not repaired by SKC or authorized SKC repair centers. Use only SKC-approved parts to ensure reliable performance. Failure to do so voids any warranty.

Ordering Information

QuickTake 30 requires 3/8-inch ID tubing.

Description	Cat. No.	
QuickTake 30 Sample Pump ** includes battery pack and cassette and tubing adapters; <i>requires Cat. No. 223-245 charger accessory below</i>	228-9530C	
QuickTake 30 Sample Pump ** and Charger includes pump with battery pack, AC charger/adapter (100-240 V), cassette and tubing adapters, and tubing	228-9530	
QuickTake 30 Sample Pump ,** Rotameter , and Charger includes pump with battery pack, AC charger/adapter (100-240 V), cassette and tubing adapters, rotameter, and tubing	228-9530A	
QuickTake 30 BioStage Pump ** Kit includes pump and charger as described above, Standard BioStage Impactor, mounting bracket with inlet adapter, calibration adapter, rotameter, and deluxe carry case	228-9530K	
Replacement Parts		
Replacement Inlet Filters , pk/50	P40021A	
Stem Tubing Adapter , pk/2	P31239	
Cassette Adapter	P33100	
Reducing Adapter for Tubing , 3/8 inch to 1/4 inch, pk/2	P31211	
Replacement Battery Pack *	P75689	
Replacement Stack for QuickTake 30	P21266	
Accessories		
Charger/Adapter , 100-240 V	223-245	
Defender Primary Standard Calibrator , 300 ml/min to 30 L/min, includes lead-acid battery, multi-plug charger (100-240 V), DryCal Pro Software, 39-inch (1-meter) serial cable, and leak test caps	717-510H	
Sampling Wand , telescopes to 34 inches (0.9 meter) for ductwork and hard-to-reach locations; includes 6 feet (1.8 meters) of tubing	228-9521	
Mounting Bracket for BioStage Impactor includes inlet adapter	228-9531	
Rotameter , 3 to 30 L/min	320-100	
Tygon Tubing , 3/8-inch ID	10 feet	225-1351
	50 feet	225-1352

* Pump contains Li-Ion battery and may be subject to special shipping regulations.

† Use in non-explosive environments only. Not UL Listed for intrinsic safety

Cautions:

- Use only SKC-approved parts to ensure reliable performance. Failure to do so voids any warranty.
- Failure to follow warnings and cautions voids any warranty.